


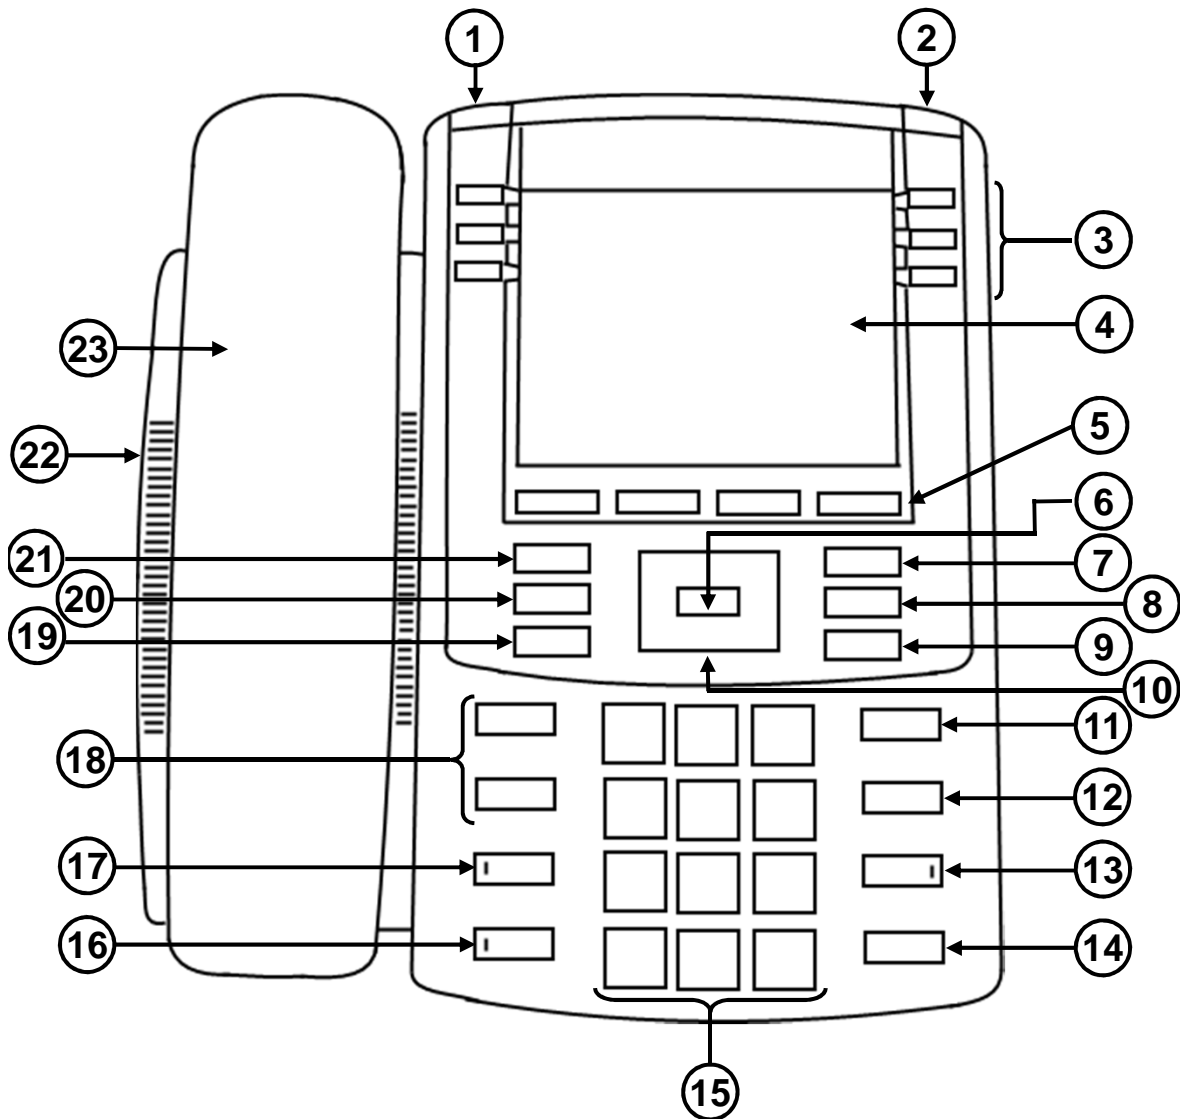



 





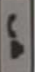 




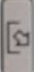

IP Phone 1120E & 1140E Phone Layout



- | | |
|------------|----------------------------------|
| 1: | Feature Status Indicator |
| 2: | Message Waiting Indicator |
| 3: | Programmable Buttons |
| 4: | Display Screen |
| 5: | Soft Keys* |
| 6: | Enter Key |
| 7: | Messages Key |
| 8: | Shift Key |
| 9: | Directory Key |
| 10: | Navigation Keys |
| 11: | Goodbye Key |
| 12: | Expand Key |
| 13: | Headset Key |
| 14: | Hold Key |
| 15: | Keypad |
| 16: | Handsfree Key |
| 17: | Mute Key |
| 18: | Volume Control Keys |
| 19: | Quit / Stop Key |
| 20: | Services Key |
| 21: | Copy Key |
| 22: | Speaker |
| 23: | Handset |

Notes:

- 1120E – 4 Programmable buttons.
- 1140E – 6 Programmable buttons.
- Soft keys will change depending on the state of the phone.

#	Item	Button	Description
1	Feature Status Lamp Indicator		Blue lamp flashes when firmware is updating.
2	Visual Alerter / Message Waiting Indicator		Flashing lamp on incoming call. Steady lamp when voice mail available.
3	Programmable Buttons		Self labeling buttons for extensions or features. A steady LCD lamp next to a feature key indicates the feature is active.
4	Display Screen		LCD screen. NOT a touch screen.
5	Soft Keys		Button corresponds to the label above the soft key. Key changes based on the available feature. When a triangle appears before a soft key label, the feature is active. The "More..." soft key indicates additional features on the next softkey page.
6	Enter Key		Used to confirm menu selections.
7	Messages Key		[MsgIn/box] Speed dial to voice mail.
8	Shift / Outbox Key		[Shift/Outbox] Used to toggle between pages 1 and 2 to access lines and features (1140E if programmed).
9	Directory Key		[Directory] Used to access Directory services.
10	Navigation & Enter Key		The Up/Down arrows are used to scroll through menus and lists that appear on the LCD display screen. The Left/Right arrows are used to position the cursor in editable fields. The Enter key (middle button) is used to select items in a menu.
11	Goodbye Key		[Goodbye] Terminates an active call. Press the flashing line key to retrieve held call.
12	Expand Key		[Expand] Used to access external server applications.
13	Headset Key		[Headset] Used to answer a call or switch from a headset or handsfree call to the headset. Press the headset key twice to open the bluetooth setup menu (1140E).
14	Hold Key		[Hold] Puts an active call on hold.
15	Keypad		Standard keypad.
16	Speaker Key		[Handsfree] Used to activate Handsfree communication.
17	Mute Key		Puts your phone into a state where you can listen to the connected party, but you are not able to transmit audio. The Mute key can be used with the headset, speaker, or headset. If mute is not enabled on your phone, pressing the mute key puts the call on hold.
18	Volume Control Keys		[Volume +/-] Used to adjust the volume of the handset, headset, speaker, and ringer.
19	Quit / Stop Key		[Quit] Used to end an active application.
20	Services Key		[Services] Used to access the Services menu.
21	Copy Key		[Copy] Used to copy entries to your Personal Directory from other lists (Caller List, Redial List, and Corporate Directory).
22	Speaker		Used for handsfree communication.
23	Handset		Standard handset.
	USB Port		Located on the back of the phone. Supports keyboard, mouse, wireless headset, or an audio device.
	Bluetooth		Phone supports bluetooth 1.2 wireless headsets (1140E).